


ANGOLARE VARIABILE JOI S - prosystemitalia.com

ANGOLARE VARIABILE JOI S

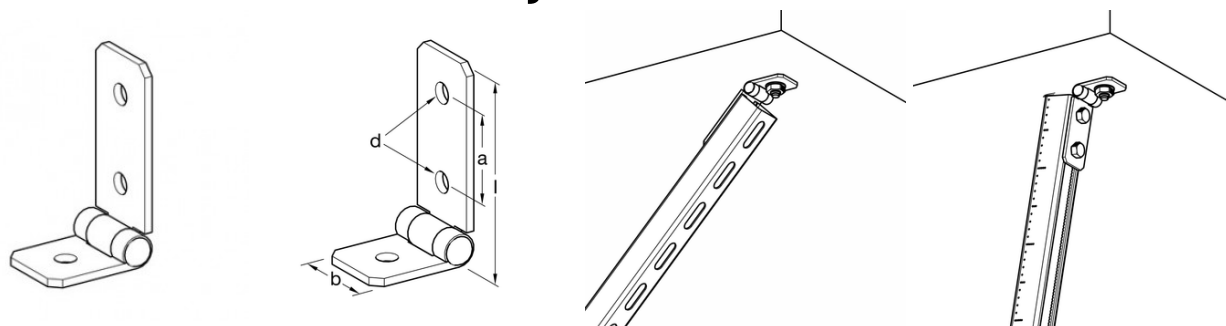

Application

To connect Channels 41 to the building structure if an arbitrary, continuous angle adjustment up to 180° is necessary. The Joint JOI S is especially used for the connection to the structure. The two fixing points to channel ensure a rotation lock, so lateral forces can be compensated.

Installation

Version 1:

1. Fix the Joint JOI S by means of anchor/plug or bolt to the building structure or to the channel.
2. Fix to channel by means of Channel Nuts M10.

Version 2:

1. Insert the Channel Nut into the channel and fix it with the bolts.
2. Connection to building structure or channels with appropriate anchors or bolts.

Technical Data

Nominal load:	2.0 kN
Tightening torque:	50 Nm
Material:	Steel, galvanised

Tipo	Kg	Pezzi per confezione	Codice Articolo
JOI S	0.33	50	116577